


How to Set Up the S9 (MCP) Using DEMS

1. Uninstall the cmsmpu APP

First, uninstall the pre-installed **cmsmpu APP** on the camera. Follow the steps below:


After the camera is powered on, go to the **App**, then **long press the cmsmpu APP** and uninstall it. *(If the app is not pre-installed, please proceed directly to Step 2.)*

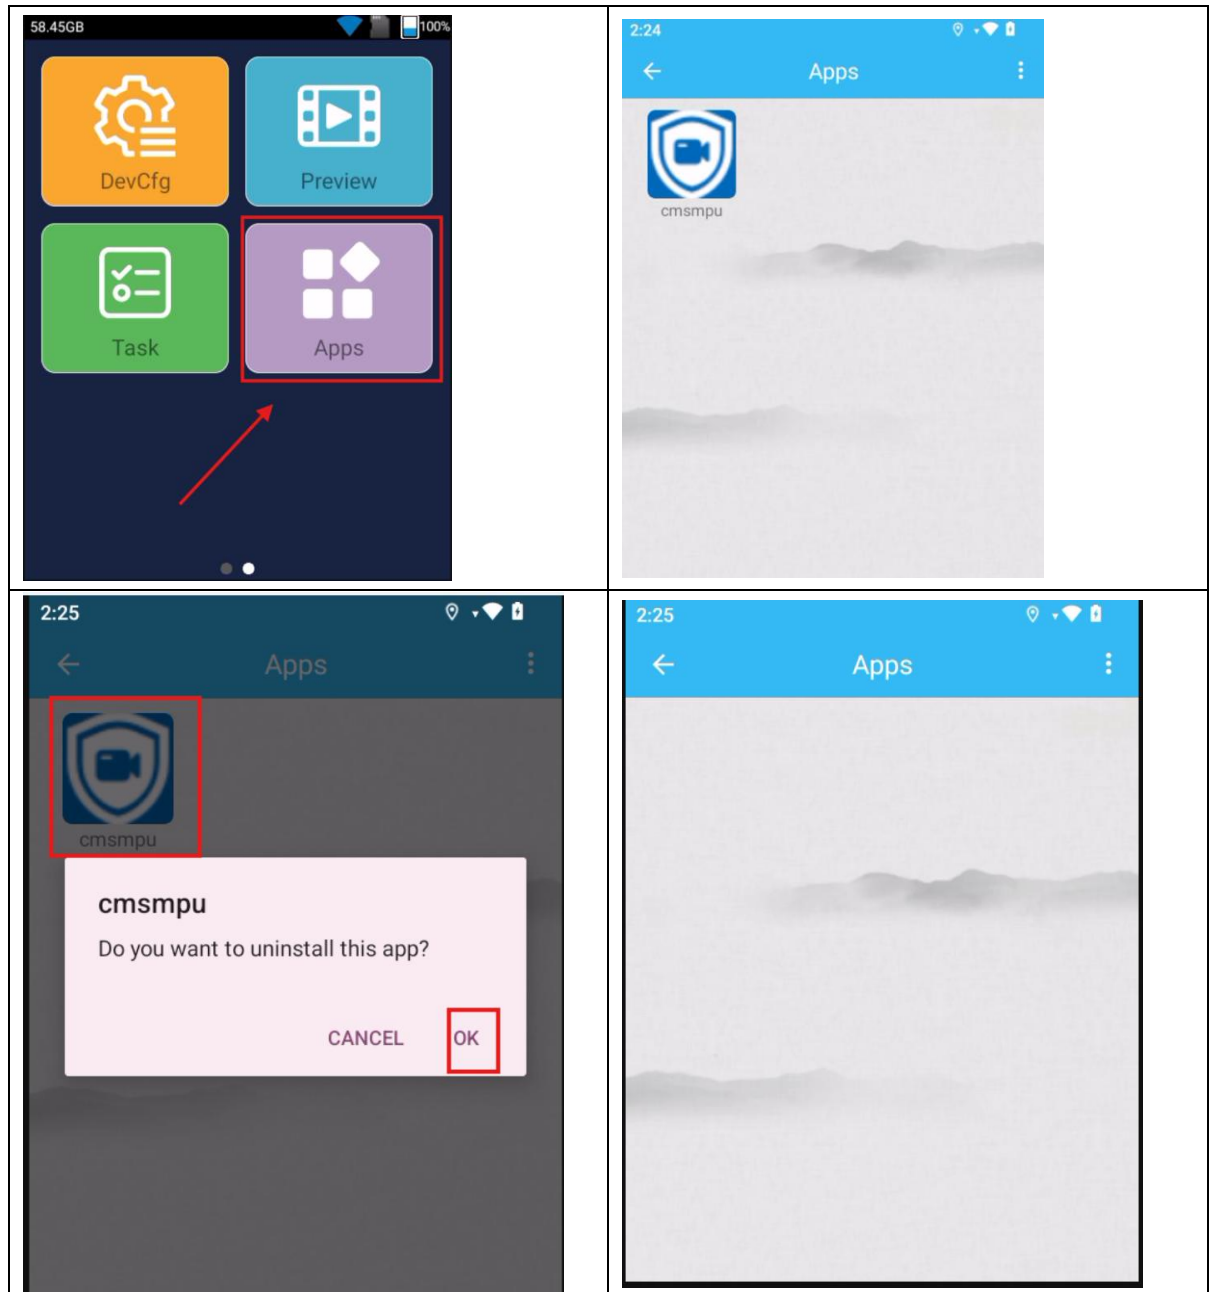


2. Install the USB Client

After uninstalling, open the **Flashing Tool**, and click **Install USB Client**.

Once the installation is complete, go to **Locset** → **Other Setting** → **Open U Disk Mode** (enter password: 888888).

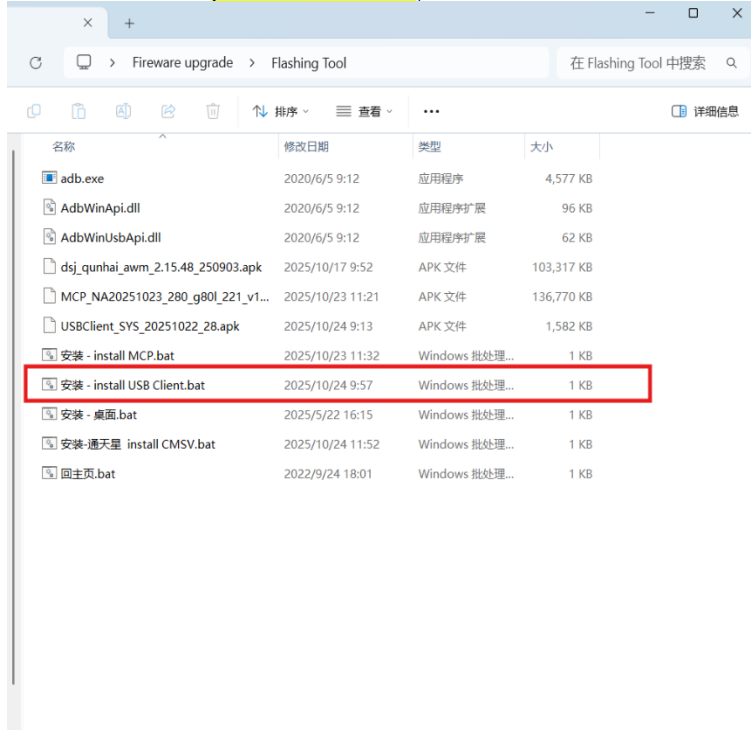


1

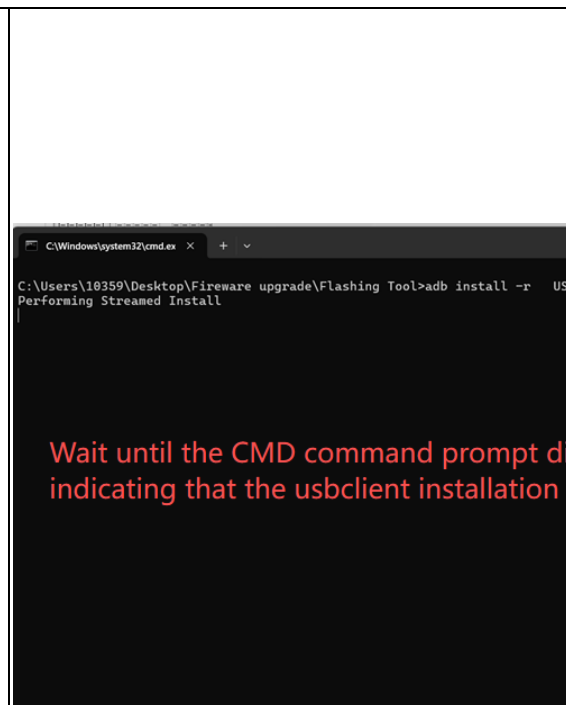


2


Wait until the CMD command prompt disappears, indicating that the usbclient installation is complete.

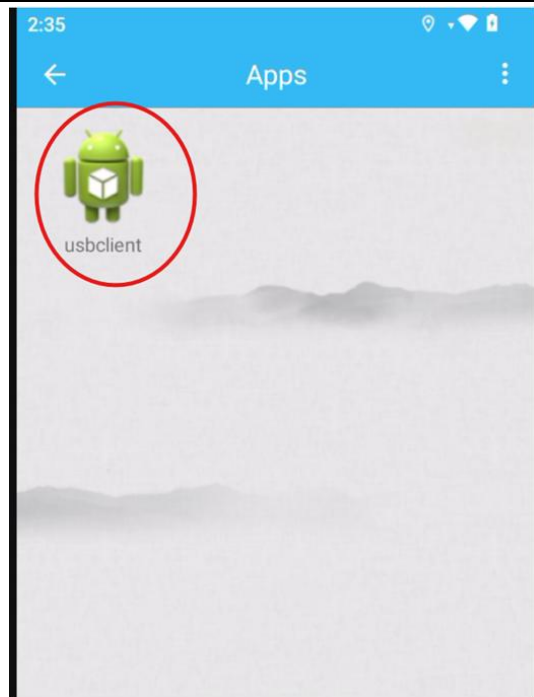

3

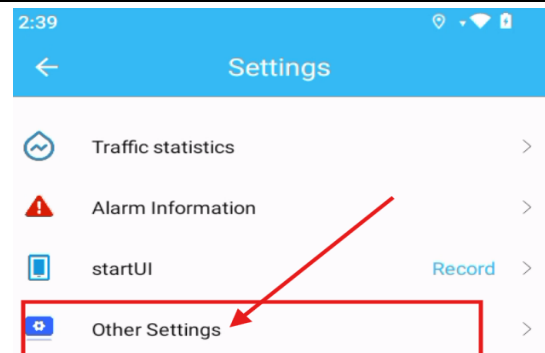

4

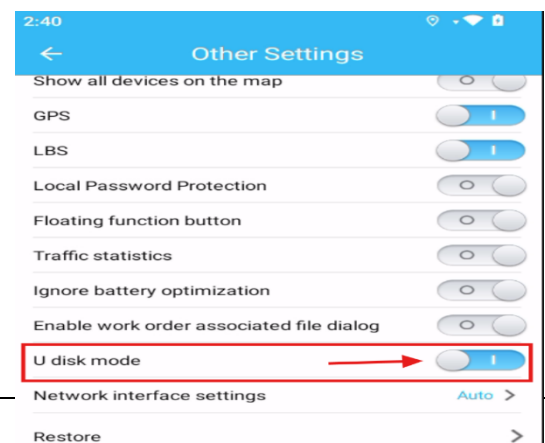


3. Copy the Param.ini File

After uninstalling cmsmpu and enabling **U Disk Mode**, connect the camera to the PC via the data cable.

You will see the external **SD storage drive** appear on your PC, allowing you to access and export files from the camera.

Next, copy the **Param.ini** configuration file into each camera's storage(SD Card).

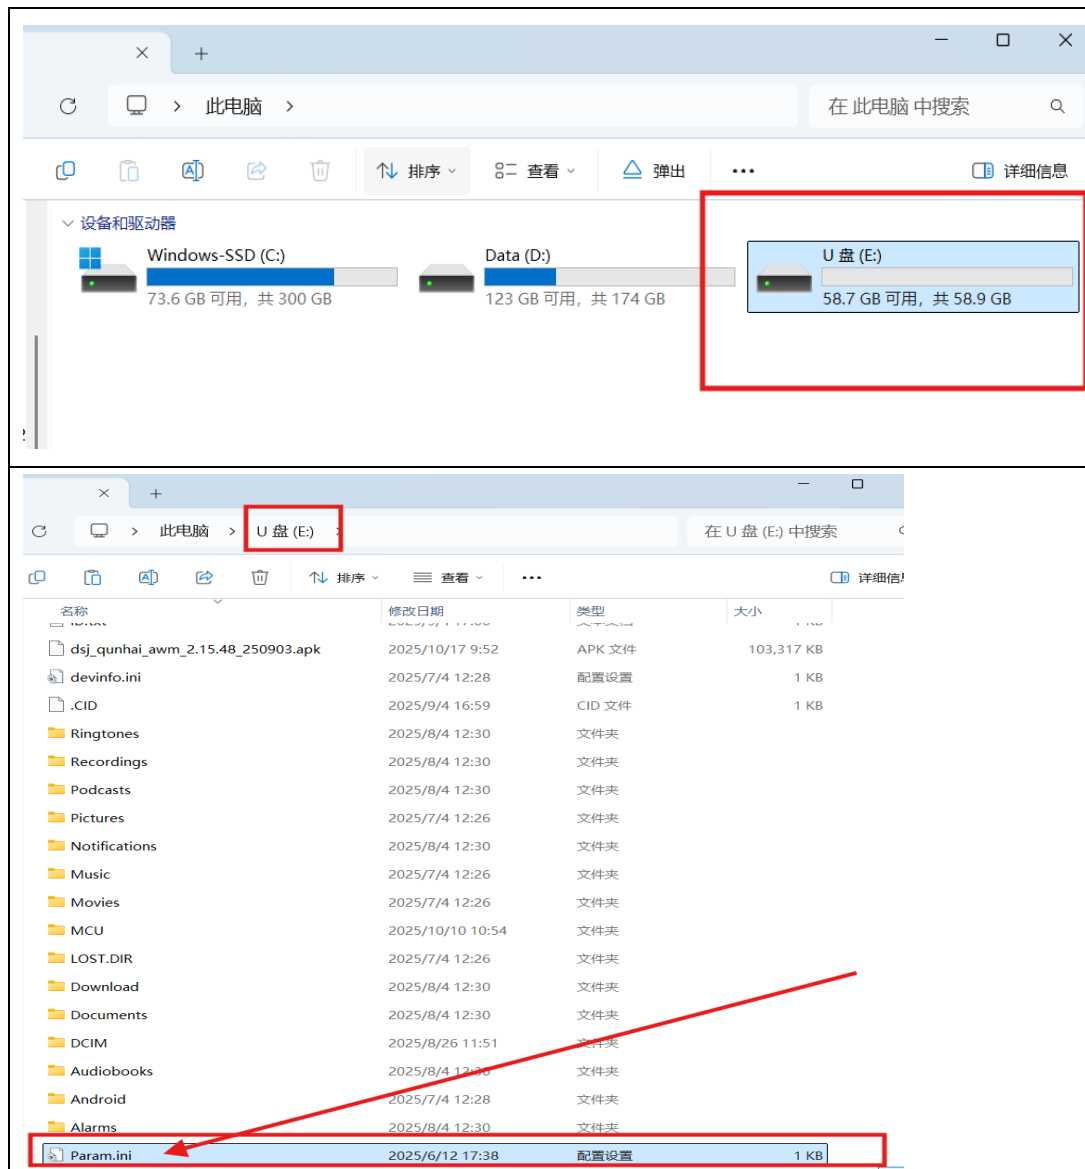

Next, copy the **Param.ini** configuration file into **each camera's** storage(SD Card).

Make sure to **keep U Disk Mode enabled** afterwards.

With these steps completed, the **S9 body camera (MCP)** can now work together with the **DEMS system**.

